



PDHonline Course E153 (3 PDH)

Performance Assessment of Lighting Systems

Instructor: A. Bhatia, B.E.

2020

PDH Online | PDH Center

5272 Meadow Estates Drive
Fairfax, VA 22030-6658
Phone: 703-988-0088
www.PDHonline.com

An Approved Continuing Education Provider

Performance Assessment of Lighting Systems

Course Content

Lighting plays a vital role in enabling people to carry out their tasks safely, efficiently and without discomfort, however electric lighting can account for around 30-40% of your electricity bill. An energy efficient lighting system combines low running and maintenance costs, with good effective lighting and can reduce the facility's lighting costs by up to a third.

Evaluating Lighting Systems

Most interior lighting requirements are for meeting average luminance on a horizontal plane, either throughout the interior, or in specific areas within the interior combined with general lighting of lower value. The objective is to get highest lighting at lowest power consumption. Two terms may be used here 1) efficient lighting and 2) effective lighting.

Although both the terms are often used interchangeably, there is a difference.

Efficient lighting

Efficient lighting systems can be described in engineering terms of performance. The term lighting efficiency measures the lamp's ability to convert input electric power into luminous power. Since electric power is measured in watts and luminous power in lumens, the unit of efficiency or efficacy is lumen per watt. If there are auxiliary devices necessary for a particular lamp operation, its energy consumption is charged towards the light source. This is the case with fluorescent, mercury, metal halide, and sodium lamps. All these lamps require ballast. Sometimes the efficiency is also defined in terms of watts per square foot.

Effective lighting

Effective lighting on the other hand, is described in terms of "how appropriate the lighting is for the function it is performing". In this usage, effective means doing the right thing.

This is not to say that one is exclusive of the other. Often, more effective lighting also results in lower energy consumption or the efficient lighting systems also provide better lighting quality.

Energy conservation issues in context to lighting shall be considered only after determining which lighting system effectively supports the particular tasks, workers, and spaces at a site. If a strategy designed to reduce energy consumption also reduces productivity, every energy dollar saved could mean \$10, \$20 or more wasted because of lost productivity. The value derived from energy savings alone may be small compared to the overall value derived from more effective lighting.

Understanding Facility Lighting Systems

Lighting Systems

A lighting fixture or luminaire consists of 1) the light source (the lamp) & ballast, 2) lamp holders, 3) an optic system, 4) a means for connecting to a power supply and 5) housing.

Luminaires and controls together form a lighting system. The light source or lamp drives the system and is the starting point for lighting analysis and design.

Light Sources

Lighting professionals use the term lamp to describe light sources commonly called light bulbs and tubes. Incandescent, fluorescent, and high-intensity discharge (HID) lamps are the most common lamps used for building lighting systems.

Light sources vary considerably in terms of efficiency, color, life, and the other attributes that create better lighting. Energy-efficiency and lamp life affect economics. Lamp operation issues are also important. These include starting, flicker, thermal and vibration sensitivity, dimability, and end-of-life behavior.

The characteristics of different lamp types are described later in this course.

Ballasts

Ballasts are required to start and operate fluorescent and HID lamps. Fluorescent lamp ballasts provide the voltage to start the arc discharge and they regulate the lamp current to stabilize light output. Rapid-start ballasts also provide the heating current to the electrodes so that lower voltages are necessary to ignite the arc compared to instant-start systems.

The ballast must be compatible with the specific lamp it is operating, as well as the electrical supply voltage. Ballasts affect the system's light output, power consumption, and in some cases, lamp life. Thus, they contribute to achieving the targeted level of illumination and, importantly, to system economics.

Ballasts use energy during operation, which decreases the overall efficiency of a lighting system (ballast loss). When fluorescent lamps are operated by electronic ballast at high frequency, they convert the input power to light output more efficiently. The lumens per watt (LPW) of the lamp-electronic ballast combination increases, which means the system either produces more light for the same power or produces the same light with less power. The U.S. Department of Energy has laid a mandatory requirement that all fluorescent lamp ballasts manufactured for commercial and industrial use for both new and renovation markets must be electronic by the year 2005.

Luminaires

Fixtures include the optics that direct light where it is desired and control glare. A well-designed fixture provides the desired distribution of light, good glare control, and high efficiency. The optical system includes the lamp cavity and diffusing media plus one or more of the following components: reflectors, refractors, lenses, baffles, or louvers.

- 1) Reflectors redirect light by using the principle of reflection. Retrofit reflectors upgrade the performance of fluorescent luminaires by increasing the interior reflectance.

- 2) A refractor is a component that redirects light by refraction.
- 3) Lenses enclose a fixture and help to alter the directional characteristics of light passing through it. Polystyrene lenses are the least expensive but emit yellow color due to the UV radiation from lamps. Lenses made from acrylic light are light stabilized. Polycarbonate lenses are more durable than acrylic but will discolor faster; both plastic materials will attract dirt via static electricity. Borosilicate glass lenses are often used where the most durable, clean, and long-lasting optics are desired. They are heavier and more costly than plastic lenses.
- 4) Translucent sheets of milky-white plastic, called diffusers scatter light uniformly in all directions below the ceiling plane, reducing source brightness, and shielding the lamps.
- 5) Parabolic luminaires use large-cell louvers formed in a parabolic shape. The resultant light distribution reduces glare, controls light output, and has high aesthetic appeal.

Controls

Controls can reduce the electrical energy used by lighting systems in two ways:

Electrical energy can be reduced either by reducing the lighting power (kW) or by reducing the time of use (hours), and since electric use is measured and billed by kilowatt-hours (kWh), reducing either reduces electric costs. Operating hours can be reduced by switching, occupancy sensors, scheduling controls, or photocells.

The more tightly you control the lighting system, the less energy it will consume. The characteristics of different type of controls are described later in this course.

Performance Terms and Definitions

Lumen: Lumen or luminous flux is a unit of light output. The different types of lamps available in the market are labeled with an output rating in lumens.

Lux: The quantity of light that falls on a work surface, called illuminance, is measured in lux or footcandles. The lux (lx) equals 1 lumen per sq-m and the footcandle (FC) equals one lumen per sq. ft. A light meter can be used to measure the illuminance.

Average rated life: The rated life of a lamp is the value, in hours, at which half of a large group of that lamp fails under standard test conditions. Any particular lamp or group of lamps may vary from the published rated life. For fluorescent and HID lamps, the average rated life is affected by the burn cycle (the average time that a lamp is on before it is turned off).

Lamp lumen depreciation (LLD): Light sources lose their ability to produce light over time due to age. Lamp lumen depreciation (LLD) represents the percent of initial lumens remaining at 40 percent of rate life.

LLD can be calculated by dividing the design (mean) lumens by the initial lumen rating. For example, for a 32 watt T8 lamp that has an initial rate of 2,900 lumens and a design lumen rating of 2,610,

LLD=0.90 (2,610/2,900 = 0.90). This means that the T8 lamp will retain 90 percent of its initial light output after 40 percent of its average rated life. Lumen depreciation is affected by the ballast used, line-voltage tolerances, and burn cycle.

Circuit Watts: Circuit watt is the total power drawn by lamps and ballasts in a lighting circuit under assessment.

Installed Load Efficacy is the average maintained illuminance provided on a horizontal working plane per circuit watt with general lighting of an interior. Unit: lux per watt per square meter (lux/W/m²)

Installed Load Efficacy Ratio (ILER): The installed load efficacy ratio is the ratio of the average maintained illuminance provided on a horizontal working plane per circuit watt to the target illuminance on a horizontal working plane.

$$\text{Installed Load Efficacy Ratio (ILER)} = \frac{\text{Actual Lux/W/m}^2}{\text{Target Lux/W/m}^2} \text{ or } \frac{\text{Target W/m}^2/100\text{Lux}}{\text{Actual W/m}^2/100\text{Lux}}$$

Average maintained illuminance is the average of lux levels measured at various points in a defined area. The ILER is an important indicator of lighting efficacy, (more details later in this course).

Luminous efficacy (LPW): is the amount of light (lumens) emitted by a lamp for each watt of power consumed by the lamp circuit, i.e. including control gear losses. Unit: lumens per circuit watt (lm/W). The higher the LPW, the more efficient is the light source.

Installed Power Density: The installed power density per 100 lux is the power needed per square meter of floor area to achieve 100 lux of average maintained illuminance on a horizontal working plane with general lighting of an interior. Unit: watts per square meter per 100 lux (W/m²/100 lux)

$$\text{Installed Power density (W/m}^2/100 \text{ lux)} = \frac{100}{\text{Installed load efficacy (lux/W/m}^2)}$$

Visual Comfort Probability (VCP): is a rating of lighting systems that is expressed as a percentage of people who, when viewing from a specified location and in a specified direction, will find the lighting system acceptable in terms of discomfort glare. The IESNA minimum recommendation of electronic offices is 80.

Color Rendering Index (CRI): Color rendition describes the effect a light source has on the appearance of colored objects. The higher the CRI, the less distortion of the object's color by the lamp's light. The maximum CRI is 100 (natural sunlight). A CRI of 100 indicates that there is no color shift as compared to a reference source, and the lower the CRI, the more pronounced the shift. A low

CRI indicates that some colors may appear unnatural when illuminated by the lamp. CRI values should only be compared between lamps of similar color temperature.

Color temperature (CCT): The color temperature is described in terms of its lighted appearance to the eye – whether it appears "warm" or "cool." CCT is measured on a Kelvin scale, ranging from 1,500 K (which appears red-orange) to 9,000 K, which appears blue. Light sources lie somewhere between these two, with those of high color temperature (4,100 K) appearing "cool" and those of lower color temperature (3100 K) being "warm."

Note a difference...Color temperature is how "warm" or "cool" the light looks; Color rendering is how well a light source shows an object's "true colors"

Purpose of the Performance Test

The main purpose of performance test is to calculate efficacy in terms of lux/watt/m² for lighting installation. The efficacy of an existing (or design) lighting installation can be assessed by carrying out a lighting survey or audit. The procedure involves 3 steps:

Step one: It starts with gathering information concerning the characteristics and the current condition of lighting systems and the lighted environment. This information is used as baseline data.

Step two: The calculated value can then be compared with the norms/standards for specific types of interior installations for assessing improvement options.

Step three: Identifying opportunities for improvements and investigating installing new types of lamps in existing fixtures, retrofitting or replacing fixtures, installing new controls, and more.

Recommendations should discuss factors relevant to the management goals, including the quality of lighting, energy savings, cost reductions, and payback.

The next stage is implementing and monitoring the plan.

Facilities managers trying to understand and evaluate lighting systems must be familiar with fundamental concepts about lighting, including:

- Quantity
- Quality
- Lamp technologies
- Ballast technologies
- Luminaries
- Controls
- Maintenance
- Quantity of Light

It's important to remember that best intentions alone don't generate energy savings.

Quantitative Criteria

From the energy efficiency point of view, the main criteria of lamps evaluation is the amount of light

emitted (lumens) and the energy they consume (watts). Combining these values gives what is termed “the lamp efficacy” (lumens/watt), which is the amount of light emitted for the amount of energy put in. Therefore, the higher the efficacy, the lower shall be the running costs.

Light Level or Illuminance (FC)

A host of issues must be given careful consideration before a hasty conclusion is reached regarding appropriate light levels. These include, but are not limited to:

- The type of space;
- How it is used;
- Flexibility of use;
- Desired lighting effects;
- Visual tasks; and
- Owner's liability

There are several weighting factors: occupants' age; importance of speed and/or accuracy in performing a task; and reflectances. These judgments are best made by an experienced lighting professional.

The standard recommendations on the illumination levels based on the space use are also set in by the Illuminating Engineering Society of North America (IESNA) or CIBSE, UK. These consensus recommendations have been agreed upon by lighting professionals and the norms can be best referred in the IESNA/CIBSE handbook.

Power Density (W/ft²)

The first basis for identifying opportunities for improvement is power density (PD). Power density is the power allowance for a building, measured in watts per square foot. The efficiency of installed lighting systems can be determined by using power density as a figure of merit. New, efficient office lighting systems—without daylight contribution— should measure 1.0 w/sq-ft. Office lighting systems that calculate above this value are usually considered inefficient and are good candidates for upgrade or relighting.

The power density of lighting systems can be used by the auditor as a screening measure. If a particular lighting upgrade is calculated to be cost-effective for spaces of a certain PD, then all similar spaces measuring higher than that PD can also be upgraded cost effectively.

Preparation (before Measurements)

Before starting the measurements, the following care should be taken:

- 1) All lamps should be operating and no luminaires should be dirty or stained.
- 2) There should be no significant obstructions to the flow of light throughout the interior, especially at the measuring points.
- 3) Accuracies of readings should be ensured by
 - Using accurate illuminance meters for measurements

- Sufficient number and arrangement of measurement points within the interior
- Proper positioning of illuminance meter
- Ensuring that no obstructions /reflections from surfaces affect measurement.

The procedure recommended for such site measurement is described in next section.

Procedure for Lighting Systems Assessment

The lighting layouts can be modeled or reviewed either using lighting power density method or the lighting level (lumen) method. Both of these techniques require photometric information for the luminary (lamp and ballast), the luminary layout, the three-dimensional shape of the space, and the reflectances of the surfaces. The assessment methodology is as follows:

- 1) Step 1: Measure the floor area of the interior
- 2) Step 2: Calculate the Room Index and determine the number of measurement points
- 3) Step 3: Determine the total circuit watts of the installation by a power meter, if a separate feeder for lighting is available. If the actual value is not known a reasonable approximation can be obtained by totaling up the lamp wattages including the ballasts
- 4) Step 4: Divide 3 by 1 to calculate watts per square meter
- 5) Step 5: Ascertain the average maintained illuminance, E-avg. maintained (average lux levels)
- 6) Step 6: Divide 5 by 4 to calculate lux per watt per square meter
- 7) Step 7: Obtain target Lux/W/m² lux for type of the type of interior/application and RI
- 8) Step 8: Divide 6 by 7 to calculate 'Installed Load Efficacy Ratio' (ILER)

(Follow an example later at this section)

Room Index

To determine the minimum number and positions of measurement points; calculate the *Room Index*:

$$\text{Room Index (RI)} = \frac{L \times W}{H_m(L + W)}$$

Where

- L = length of interior
- W = width of interior
- H_m = the mounting height, which is the height of the lighting fittings above the horizontal working plane.

The working plane is usually assumed to be 0.75m above the floor in offices and at 0.85m above floor level in manufacturing areas.

It does not matter whether these dimensions are in meters, yards or feet as long as the same unit is used throughout. Ascertain the minimum number of measurement points from table below.

Determination of Measuring Points

Room Index	Minimum Number of Measuring Points
------------	------------------------------------

Below 1	9
1 and below 2	16
2 and below 3	25
Above 3	36

The interior is divided into a number of equal areas, which should be as square as possible. The illuminance at the centre of each area is measured and the mean value calculated. This gives an estimate of the average illuminance on the horizontal working plane.

To obtain an approximately "square array", i.e. the spacing between the points on each axis to be approximately the same, it may be necessary to increase the number of points. (Refer to the example later in this section)

Target (lux/W/m²) Values for Various Facilities

How much light is required to illuminate workspaces or to perform tasks?

The most effective lighting in terms of performance and cost begins with a thorough understanding of the specific application. The nature of the industry - its visual requirements and its workforce - determines the basic lighting needs and the quality and quantity of illumination. The specifics of the space and equipment, and the need for flexibility determine what equipment will best provide the desired lighting and where it will be placed.

The table below based on CIBSE recommendation provides the target lux/W/m² (W/m²/100lux) values for maintained illuminance on horizontal plane (for all room indices) for different applications:

TARGET lux/W/m² or (W/m²/100lux) VALUES

Room Index	Commercial Lighting (office, retail stores etc.) & very clean industrial applications, Standard or good color rendering, Ra: 40 - 85	Industrial Lighting (manufacturing areas, workshops, warehouse etc.) Standard or good color rendering, Ra: 40 - 85	Industrial Lighting installations where standard or good color rendering is not essential, but some color discrimination is required, Ra: 20 - 40
5	53 (1.89)	49 (2.04)	67 (1.49)
4	52 (1.92)	48 (2.08)	66 (1.52)
3	50 (2.00)	46 (2.17)	65 (1.54)
2.5	48 (2.08)	44 (2.27)	64 (1.56)
2	46 (2.17)	42 (2.38)	61 (1.64)
1.5	43 (2.33)	39 (2.56)	58 (1.72)
1.25	40 (2.50)	36 (2.78)	55 (1.82)
1	36 (2.78)	33 (3.03)	52 (1.92)

Ra: Color Rendering Index

The principal difference between the targets for Commercial and Industrial Ra: 40-85 (Cols.2 & 3) is the provision for a slightly lower maintenance factor for the latter. The targets for very clean industrial applications, with Ra: of 40 -85 are as column 2.

The Illuminating Engineering Society of North American (IESNA) provides light level (illuminance) recommendations. The new IESNA Lighting Handbook, 9th edition, contains the latest illuminance recommendations, which are intended to prevent under-lighting and over-lighting. Over-lighting wastes energy and reduces lighting quality.

Indicators of Performance (ILER Assessment)

Compare the calculated ILER with the information in Table below:

Indicators of Performance

ILER	Assessment
0.75 or over	Satisfactory to Good
0.51 to 0.74	Review Suggested
0.5 or less	Urgent action required

ILER Ratios of 0.75 or more may be considered to be satisfactory. Existing installations with ratios of 0.51 - 0.74 certainly merit investigation to see if improvements are possible. Of course there can be good reasons for a low ratio, such as having to use lower efficacy lamps or less efficient luminaries in order to achieve the required lighting result –but it is essential to check whether there is a scope for a more efficient alternative. Existing installations with an ILER of 0.5 or less certainly justify close inspection to identify options for converting the installation to use more efficient lighting equipment. Having derived the ILER for an existing lighting installation, then the difference between the actual ILER and the best possible (1.0) can be used to estimate the energy wastage. For a given installation:

Annual energy wastage (in kWh) = (1.0 - ILER) x Total load (kW) x annual operating hours (h)

This process of comparing the installed load efficacy (ILE) with the target value for the Room Index and type of application can also be used to assess the efficiency of designs for new or replacement general lighting installations. If, when doing so, the calculated ILE (lux/W/m²) is less than the target value then it is advisable to ascertain the reasons. It may be that the requirements dictate a type of luminaire that is not as efficient as the best, or the surface reflectance's are less than the normal maxima, or the environment is dirty, etc., whatever the reasons are they should be checked to see if a more efficient solution is possible.


Example

For example, the dimensions of an interior are: Length = 9m, Width = 5m, Height of luminaries above working plane (Hm) = 2m, than calculate room index as follows:

$$\text{Room Index (RI)} = \frac{9 \times 5}{2 \times (9 + 5)} = 1.93$$

Corresponding to RI of 1.93, the minimum number of measurement points are 16 (refer table above).

Sketch a layout of room on piece of paper to arrange the 16 measuring points. As it is not possible to approximate a "square array" of 16 points within such a rectangle, it is necessary to increase the number of points to say 18, i.e. 6 x 3. These should be spaced as shown below:

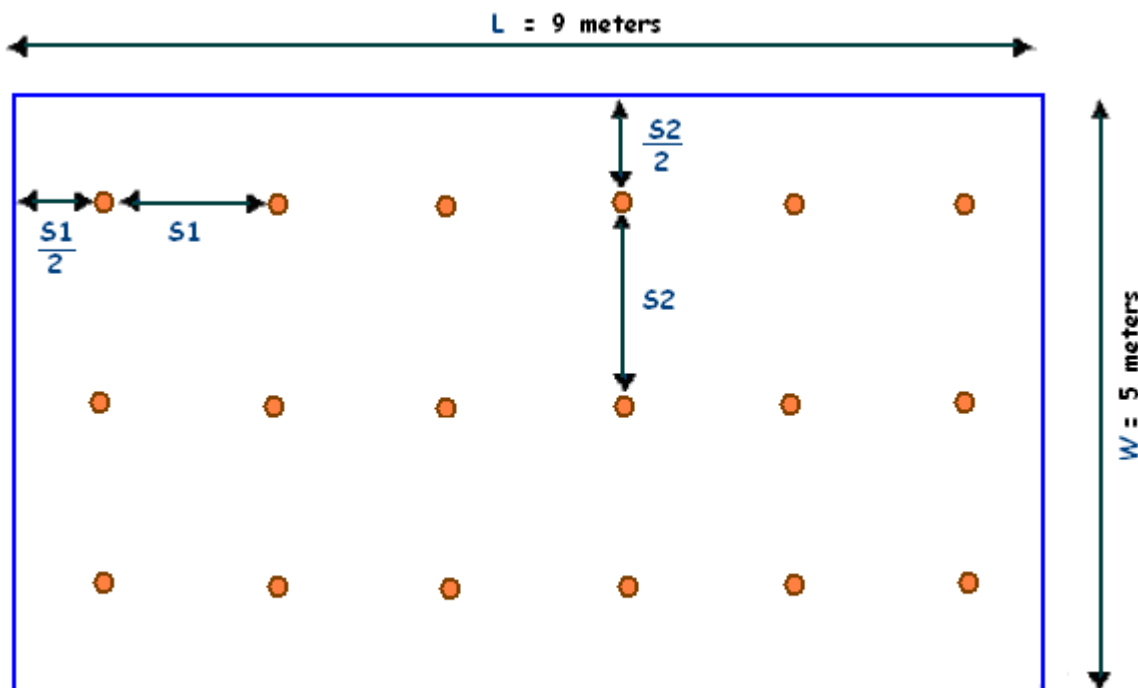

MEASUREMENT POINTS

Therefore in this example, the spacing between points along rows along the length of the interior $S1 = 9 \div 6 = 1.5m$ and the distance of the 'end' points from the wall $S1/2 = 1.5 \div 2 = 0.75m$.

Similarly the distance between points across the width of the interior, $S2 = 5 \div 3 = 1.67m$ with half this value, $S2/2 = 0.83m$, between the 'end' points and the walls.

It is important to note here, that if the grid of the measurement points coincides with that of the lighting fittings, large errors are possible and the number of measurement points should be increased to avoid such an occurrence.

STEP 1 : Measure the floor area of the interior:	Area = 45 m ²
STEP 2 : Calculate the Room Index	RI = 1.93
STEP 3 : Determine the total circuit watts of the installation by a power meter if a separate feeder for lighting is available. If the actual value is not known a reasonable approximation can be obtained by totaling up the lamp wattages including the ballasts:	Total circuit watts = 990 W
STEP 4 : Calculate Watts per square metre, $3 \div 1 :$	W/m ² = 22
STEP 5 : Ascertain the average maintained illuminance, E avg. Maintained (average lux levels measured at 18 points)	E avg. maintained = 700
STEP 6 : Divide 5 by 4 to calculate lux per watt per square	Lux/W/m ² = 31.8

	Metre	
STEP 7 :	Obtain target Lux/W/m ² lux for type of the type of interior/application and RI (2):	Target Lux/W/m ² = 46
STEP 8 :	Calculate Installed Load Efficacy Ratio (6 ÷ 7):	ILER = 0.7

ILER of 0.7 means that there is scope for review of the lighting system and the annual energy wastage can be computed as:

$$\begin{aligned} \text{Annual energy wastage} &= (1 - \text{ILER}) \times \text{watts} \times \text{no. of operating hours} \\ &= (1 - 0.7) \times 990 \times 8 \text{ hrs/day} \times 300 \text{ days} \\ &= 712 \text{ kWh/annum} \end{aligned}$$

Areas for Improvement

Assess scope for more energy efficient lamps and luminaries. You can upgrade the lighting in an existing facility using three basic strategies:

- Changing lamps only
- Changing lamps and ballasts
- Changing entire luminaries (lamp and fixture)

Examples:

In warehouse replace 1,000 watt Mercury Vapor high bay retrofit existing fixture to 400 watt Metal Halide

In retail space replace 75 watts recessed downlight incandescent with 15 watt compact fluorescent lamp

In manufacturing facility replace magnetic ballast of fluorescent lights with polished reflectors and electronic ballasts.

Standard Recommendations

While each facility demands its own lighting solution, here are some guidelines for optimizing the result. The recommended luminance's do, however provide a foundation on which to base lighting design.

Use of daylight

Majority of people like natural light and it can make a positive contribution to the operation of facility. The benefit of natural light must not be ignored, and advantage should be taken of it where possible.

Challenges

- 1) Adequate day lighting can only be provided for a limited distance from windows or roof lights and will only be available for part of the working day. For this reason, correctly controlled artificial lighting must always be provided.

- 2) Large areas of un-curtained glass present problems, at night they will act as shiny black walls and cause discomfort, during the day they may well prove uneconomical because of high solar gain or heat loss. The use of special glass or outside shades will reduce this problem and also reduce visual discomfort.
- 3) The level of natural light does vary, e.g. weather, time of day and supplementary artificial light is normally required to maintain adequate lighting levels. These should be controlled to maintain a reasonably constant level of illumination at the work place.
- 4) Direct sunlight creates powerful shadows so must typically be baffled, redirected, or diffused before reaching the workspace. Properly controlled sources of top lighting can admit effectively diffuse illumination of with excellent color quality.
- 5) The variable intensity of daylight requires careful balancing of nearby electric lighting. Where (and when) the admitted daylight is minimal, electric lighting must provide adequate illumination. Where daylight is maximized, it may overwhelm adjacent areas with much lower levels of electric lighting, creating shadows and extreme contrast.

Human Factors & Safety

In any lighting application, the essential first step is analyzing the visual tasks themselves in terms of the quality and quantity of illumination required. Select light sources with appropriate color quality for the activities they will illuminate.

Good lighting is seen to be a valuable contribution to safety. Whilst the health and safety executives state that lighting should be suitable and adequate – and such may require interpretation.

Appearance

A room in which all the light is concentrated on a horizontal working plane, and little or no light is allowed to fall on walls or ceilings is likely to have a depressing atmosphere. In rooms of up to 25 m², the feeling of claustrophobia can be mitigated by using light colored walls, but in very large areas of 100 m² or more, where the field of view is extensive, it is more effective to let some light reach the ceiling. The reflectors of most luminaires are slotted in order to allow a small proportion of upward light to relieve this tunnel effect.

Generally, increasing emphasis is being placed on the need to achieve not only effective lighting condition for visual performance but also attractive visual environments.

Task/Ambient vs. General Lighting Schemes

Facilities with a wide range of visual activities intermixed throughout the space, such as a fabricating machine shop with a variety of tools and processes, can benefit from using separate ambient and task lighting systems. With this approach, it is easy to tune the task lighting to the distinctive requirements of the different operations within the facility. Facilities with a more homogenous distribution of activities, such as a warehouse or assembly operation, can often apply a more general lighting scheme with a single primary system. Specialized lighting can then be applied to those limited areas with more critical illumination requirements, such as intricate assembly, finishing, or inspection.

Direct & Indirect Glare

Glare is the sensation produced by brightness (luminance within the visual field) sufficiently greater than the brightness to which the eye is adapted to cause a loss of visual performance. Discomfort glare in building interiors is annoying and diminishes lighting quality by interfering with employee productivity more than with visual performance.

Direct Glare from light sources and reflected glare from other surfaces in the field of view can often make seeing uncomfortable (discomfort glare) or it can reduce visibility (sometimes to a dangerous degree). It can, of course, produce both effects together. Glare is not confined to electric (artificial) lighting conditions. Severe glare can be caused by badly positioned windows, and most people experience both direct and reflected glare out of doors, e.g. when driving towards the sun or looking across water.

Fortunately, direct glare can be avoided and controlled by controlling the light level and by blocking the direct view of bare lamps. Louvers such as those in deep-cell parabolic luminaires or low-glare acrylic lenses that reduce surface brightness at high viewing angles may be used. The use of indirect lighting by allowing more light to fall on walls and ceilings is the one of the best way to reduce glare in office interiors.

Reflected glare is more difficult to overcome and it is a common fault in offices and situations where glossy, light colored objects are in the field of view. Typical examples of reflected glare are

- a) Drawing offices where pencil lines become invisible because reflected light raises their brightness to that of the surrounding paper and
- b) Reflected images of luminaries in the screens of visual display units

In these and other similar situations, the reflected glare problem can be overcome or minimized to an acceptable level by suitable positioning of the luminaries relative to the task and in some instances, the use of luminaries having a more suitable light distribution.

Reflected glare significantly reduces the ability to see the visual task, thereby reducing productivity. Such problems are not always easy to solve, and it is usually best to seek professional advice.

Fixture Location

Task lighting equipment should be located as close to the task as practical. This limits the potential for shadowing and reduces the amount of light and energy cost required.

Fixtures for ambient lighting need to be mounted high enough to clear permanent and moving equipment and to distribute light effectively onto elevated vertical surfaces. Observe the spacing-to-mounting height ratio for ambient fixtures. The mounting height is calculated to the relevant task plane. Excessive spacing will create dark areas.

Note that the higher the fixtures, the more broadly the light will spread and the less illumination will fall on horizontal surfaces near the facility floor. High-mounted fixtures also incur more maintenance costs, especially where lifts or other equipment may disrupt facility operation.

Initial cost depends significantly on the number of fixtures installed and the number of separate electrical connections. Concentrating too much light in too few fixtures typically results in problematic

illumination, with both shadows and glare. Designs that locate lighting where it is needed, on the other hand, economize on energy, while enhancing human factors. Arranging the fixtures so they can be through-wired or easily connected together, and limiting the variety of fixtures and lamps are both practical, cost-saving measures.

Rule of Thumb Guidelines

The lighting load is typically determined from the nameplate wattage from the lighting layout drawings. An estimate can be made using the rule of thumb guidelines below. Note that the lighting values for most energy conscious construction will be lower values and could be very high if fancy lighting is used.

Location	Rule of thumb (Watts/sq-ft)
General Office Areas	1.5 to 3.0
Private	2.0 -5.0
Conference Rooms	2.0 – 6.0
Public Places (Banks, Post offices, Courts etc)	2.0 – 5.0
Precision Manufacturing	3.0 – 10.0
Computer Rooms/Data Processing Facilities	2.0 – 5.0
Restaurants	1.5 – 3.0
Kitchens	1.5 – 2.5
Pubs, Bars, Clubhouses, Taverns etc	1.5 – 2.0
Hospital Patient Rooms	1.0 – 2.0
Hospital General Areas	1.5 – 2.5
Medical /Dental Centres, Clinics	1.5 – 2.5
Residences	1.0 – 4.0
Hotel & Motels (public places and guest rooms)	1.0 – 3.0
School Classrooms	2.0 – 6.0
Dining halls, Lunch Rooms, Cafeterias	1.5 – 2.5
Library, Museums	1.0 – 3.0
Retail, Department & Pharmacist Stores	2.0 – 6.0
Jewellery Showrooms, Shoes, Boutiques etc	2.0 – 4.0

Location	Rule of thumb (Watts/sq-ft)
Shopping Malls	2.0 – 4.0
Auditoriums, Theatres	1.0 – 3.0
Religious Places (Churches)	1.0 – 3.0
Bowling Alleys	1.0 – 2.5

The above table provides rule of thumb data and in cases where use is not mentioned specifically, the determination shall be based upon the most comparable use.

The electrical load of lighting systems in office space ranges from 1 W/sq-ft, or less for efficient lighting, to 2 to 3 W/sq-ft for older systems.

IES - Recommendations

The Illuminating Engineering Society (IES) has published illuminance recommendations for various activities. These tables cover both generic tasks (reading, writing etc), and 100's of very specific tasks and activities. All tasks fall into 1 of 9 illuminance categories, covering from 20 to 20,000 lux, (2 to 2000 foot candles). The categories are known as A - I and each provide a range of 3 illuminance values (low, mid and high). See Table below.

IES Illuminance Categories and Values - For Generic Indoor Activities

ACTIVITY	CATEGORY	LUX	FOOTCANDLES
Public spaces with dark surroundings	A	20-30-50	2-3-5
Simple orientation for short temporary visits	B	50-75-100	5-7.5-10
Working spaces where visual tasks are only occasionally performed	C	100-150-200	10-15-20
Performance of visual tasks of high contrast or large size	D	200-300-500	20-30-50
Performance of visual tasks of medium contrast or small size	E	500-750-1000	50-75-100
Performance of visual tasks of low contrast or very small size	F	1000-1500-2000	100-150-200
Performance of visual	G	2000-3000-5000	200-300-500

tasks of low contrast or very small size over a prolonged period			
Performance of very prolonged and exacting visual tasks	H	5000-7500-10000	500-750-1000
Performance of very special visual tasks of extremely low contrast	I	10000-15000-20000	1000-1500-2000

The category A through C is for general illumination throughout the area or luminance's over a large area (i.e. lobby space)

The category D though F is for localized tasks or for illumination on the task

The category G through I is for extremely difficult visual tasks and would require a combination of general lighting and task lighting.

Once the category is determined, use the weighting factors to decide which of the values in the illuminance range to use. For instance for public facilities like libraries there may be many individuals over 55 years of age so select the high factor. Similarly decide whether the demand for speed and accuracy is critical or not so important say a drafting work may be critical but sorting the library cards may be not very critical. Assign low, mid and high illuminance values accordingly. In general aim for a 5:3:1 ratio for work, peripheral work area, and immediate surroundings, respectively.

Choice of Lamps

Besides energy efficiency (lumens/watt), the other things to consider when choosing a lamp type include:

Color appearance – Combination of color rendering and how “warm” or “cool” would you want the light to appear

Switch on times – High pressure lamps, like sodium or metal halide may take a while to reach full output levels and will not usually switch on when they are warm. These are unsuitable for switching on and off too often during a day

Flicker – Some lamps flicker on and off at high speeds e.g. fluorescents. The eye cannot see this, but it may cause rotating machinery to appear to be running faster or slower or even in a different direction. Ballasts are used to start and operate such lamps correctly, and high frequency ballasts are available which overcome the problem of flicker and use less energy

Lamp life – Where maintenance is problematic, for example where lights are mounted high up or over delicate areas such as food preparation, long-life lamps should be used

Light fittings – should be selected to screen the lamp and help to direct the light to where it is required. These are often called ‘Luminaries’ in the trade

Common Lamp Types

Lamp differ from each other in terms of luminous flux, light, the color of the light, size and energy consumption. Broadly, different types of lamps can be classified as follows:

1. Incandescent lamps (GLS)
2. Fluorescent lamps (FTL)
3. High Pressure Mercury Vapor lamps (HPMVL)
4. Halogen lamps
5. High Pressure Sodium Vapor Lamps (HPSVL)
6. Low Pressure Sodium Vapor lamps (LPSVL)
7. Metal Halide lamps
8. Mercury Blended lamps
9. Compact Fluorescent lamps

Incandescent Lamps (GLS Lamps)

Incandescent lamp – is a tungsten filament lamp that dissipates lot of heat to accompany the light emitted from its glowing filament. They are inexpensive and available in hundreds of sizes, shapes, and wattages and are easily dimmed. However, they are the least energy efficient light source – as low as 8 LPW (lumens per watt) and only 10% of its energy is emitted in the form of light.

It is used in large numbers for domestic lighting because it offers low installation and replacement costs and flexibility in use. They have short lamp life, and add heat to buildings.

Incandescent lamps are voltage sensitive. Lamp life, lumen output, and wattage depend on the applied voltage. *When 130-volt lamps are used on 120-volt circuits, lumen output will be lower and life will be longer.*

Incandescent have the highest color rendition index (CRI) of around 95. Their small size and the fact that a point source can be easily controlled and manipulated by a luminary provide some benefits when it comes to task lighting. Examples include low brightness task fixtures for use in control rooms and luminaries that produce light in a narrow controlled beam to illuminate the interiors of small machinery or intricate parts.

Tungsten-halogen lamps are more efficient than standard incandescent lamps. A halogen fill gas combines with the tungsten molecules that boil off the filament. The resulting halogen cycle increases the LPW, produces whiter light and longer life, and lowers LLD (lamp lumen depreciation).

Fluorescent Lamps (FTL Lamps)

The fluorescent lamp is the most commonly used lamp type in commercial applications. Fluorescent lamps generate light when ultraviolet energy (UV) from a mercury arc strikes a fluorescent phosphor on the inside surface of the tube. The tube contains mercury vapor at low pressure and a small amount of inert gas.

Fluorescent lamps need some form of starting device (starters) and a means of controlling the lamp current once started (ballast). A capacitor is also normally connected to provide power factor correction and reduce the current drawn from the mains for a given wattage.

Characteristics of fluorescent lamps are long life (12,000 to 22,000 hours), high efficacy (75 to 90 LPW), and excellent color rendering, especially with the newer rare-earth (RE) lamps. Fluorescent lamps are, however, temperature sensitive and their rated lamp life is dependent upon the hours per start. On average, 40 watts of energy in a fluorescent tube produces as much light as a 150-watt incandescent bulb. New T-8 fluorescent lamps (CRI = 85) are much more efficient than older T-12 lamps (CR = 62).

A ballast is required to start and operate fluorescent lamps. The ballast regulates the current drawn by the lamp, and is the heart of any fluorescent fixture. There are several types and grades of ballasts to accomplish this end.

Compact Fluorescent Lamps (CFL): CFL is the generic name for a family of single-ended fluorescent lamps of folded or bridged tube design that can be plugged into an existing incandescent lamp socket. These require about one quarter the power of GLS filament lamps for the similar light output and have 5 times more life. These are available in various configurations, some type having integral control gear others require a separate ballast. The compact lamp finds a wide range of application as a replacement or alternative to the GLS filament lamp.

A 13-watt compact fluorescent lamp (CRI = 82) replaces a 60-watt incandescent for the same light output.

Halogen Lamps

A halogen lamp is an incandescent bulb with an added halogen gas. Halogen lamps run at a higher temperature, providing a whiter light and greater efficiency.

Halogen lamps' life varies from few hours to 2000 hours depending upon the application and load. These are widely used for display, accent lighting, flood lighting, film and photographic projections, sport stadiums, halls, and lobbies.

The popular types of halogen lamps are described below.

Low-pressure sodium

This light source converts nearly 35% of the energy consumed into light. Low-pressure sodium bulbs should last at least 10,000 hours and deliver as much light at the end of their life as in the beginning. However, they are the most expensive lighting source. They are also the largest, and hence, most difficult to control in terms of light distribution. In addition, because of their singular yellow color, they have very low color rendition index (CRI). Objects under low-pressure sodium illumination appear yellow, gray, or black. Sodium lamps are also used for lighting public park areas for some indoor industrial interiors etc.

High-intensity discharge (HID) lighting

HID lamps are electric arc discharge lamps that operate under high pressure and generate their light directly from an arc. The arc is contained in a small arc tube that is enclosed in a larger outer glass bulb.

The small size of the arc permits excellent optical control and the creation of well defined beams of light. This makes HID a popular choice for high bay applications and for outdoor illumination.

Advantages include high lumen ratings and long life.

Each of these lamps requires specially designed ballast and has a high initial cost. However, their lower operating cost rapidly returns the initial investment.

High-intensity discharge lamps have one potential drawback that limits their use — a start-up delay from 1 to 7 minutes from the time they are switched on until they fully illuminate. The National Electric Code (NEC) requires a backup lighting system for HID lighting for public safety.

Common HID lamp types are mercury vapor, metal halide, and high-pressure sodium lamps:

High-pressure mercury vapor lamps (HPMV) - Mercury lamps cover a wide range of light from low pressure discharge devices of a few watts (providing a source of ultra violet light) to very high pressure lamps of 1000 watts. When fully run up, the mercury vapor lamps operate at pressures from 2atm to 10atm. The disadvantages of MV lamps include very low color rendition, high lumen depreciation, and high mercury content. It is generally used for factory and flood lighting at stadiums, airports, and street lighting.

Metal halide lamps (MH) – Metal halide lamps are much more efficient than mercury vapor lamps while having the same light output. In the MH lamp, the arc tube contains, in addition to mercury, additives called metal halides. The metal halides provide a brighter, whiter light by improving both lumen and color performance. Metal halide lamps have the best CRI of the high-intensity discharge lamps. Applications include commercial lighting interiors and lighting building facades.

Metal halide lamps, have an over all efficacy of the order of 70 to 94 LPW – about 5 times that of the incandescent lamps. Recent advances in MH include pulse-start lamps that provide better color consistency, longer life, and higher efficacy – in excess of 100 LPW.

Warm-up times for metal halide lamps range from 2-7 minutes, depending on the type of lamp, during which time the arc tube pressure rises. No metal halide lamps should be operated continuously. They should be turned off once a week for at least 15 minutes. This permits older lamps to fail passively when restarted. Additionally, metal halide lamps should not be operated beyond their rated average lives.

High-pressure sodium lamps (HPS) – High-pressure sodium (HPS) lamps have a characteristic yellow color, high efficacy – 60 to 140 LPW, and longer life than other sources. These lamps have long life, high efficacy and CRI of about 25.

Their poor color quality limits their effectiveness in occupied spaces as these that tends to blacken red and blue objects. Recent advances in HPS lamps include higher CRI models and models that do not cycle at end of life. A double arc-tube HPS lamp is available for safety and security applications.

These are however used in storage areas and warehouses. Their small size and excellent efficiency make them the most popular choice for roadway lighting, street lighting and flood lighting.

Characteristics of Different Types of Lamps

Type of Lamp	Lamp Wattage (Watts)	Lumens	Lamp Efficiency (Lumens/Watt)	Choke Rating (Watts)	Life of Lamp (Hours)	Capacitor Rating Required (Micro farads)	Color Rendering Index
HPSV	70	5600	80	13	15000 - 20000	0.2 - 0.39	12
HPSV	150	14000	93	20	15000 - 20000	0.2 - 0.39	20
HPSV	250	25000	100	20	15000 - 20000	0.2 - 0.39	32
HPSV	400	47000	118	40	15000 - 20000	0.2 - 0.39	45
HPSV Super	70	---	---	---	---	---	---
HPSV Super	100	9500	95	18	15000 - 20000	0.2 - 0.39	---
HPSV Super	150	15500	103	20	15000 - 20000	0.2 - 0.39	---
HPSV Super	250	30000	120	25	15000 - 20000	0.2 - 0.39	---
HPSV Super	400	54000	129	40	15000 - 20000	0.2 - 0.39	---
HPSV Super	600	---	---	---	---	---	---
HPMV	80	3400	43	9	4000 - 5000	0.6 - 0.69	8
HPMV	125	6300	50	12	4000 - 5000	0.6 - 0.69	10
HPMV	250	13000	52	16	4000 - 5000	0.6 - 0.69	18
HPMV	400	22000	55	25	4000 - 5000	0.6 - 0.69	18
Metal Halide	70	4200	84	26	10000	0.9 - 0.93	---
Metal Halide	150	10500	70	20	10000	0.9 - 0.93	---
Metal Halide	250	19000	76	25	10000	0.9 - 0.93	---

Type of Lamp	Lamp Wattage (Watts)	Lumens	Lamp Efficiency (Lumens/Watt)	Choke Rating (Watts)	Life of Lamp (Hours)	Capacitor Rating Required (Micro farads)	Color Rendering Index
Metal Halide	400	31000	76	60	10000	0.9 - 0.93	---
Metal Halide	1000	80000	80	65	10000	0.9 - 0.93	---
FTL	40	2400	60	15	4400	0.8 - 0.89	3.2 - 3.8
FTL Super	36	3250	90	5	14000	0.8 - 0.89	3.2 - 3.8

In summary, the performance characteristics and efficiencies of common light sources is indicated below:

Comparable Luminous Efficacies (Lumens/watt)

LAMP	Lumens/watt
Tungsten Incandescent	8-33
High Intensity Mercury	24-63
Fluorescent	19-100
Metal Halide	69-125
High Pressure Sodium	73-140

Improvements in lighting efficiency (technically called efficacy) decrease building cooling loads. However, this will also increase the heating load during the heating season. Most large commercial buildings in the south require some cooling year round. A building in the northeast will usually require more heating. Therefore, the geographic location is yet another factor to consider while deciding on the type of lighting.

Some Good Practices in Lighting

Installation of energy efficient fluorescent lamps (T8) in place of conventional fluorescent lamps (T12)

Energy efficient lamps are based on the highly sophisticated tri-phosphor fluorescent powder technology. They offer excellent color rendering properties in addition to the very high luminous efficacy.

Installation of Compact Fluorescent Lamps (CFL's) in place of incandescent lamps

Compact fluorescent lamps are generally considered best for replacement of lower wattage incandescent lamps. These lamps have efficacy ranging from 55 to 65 lumens/watt. The average rated lamp life is 10,000 hours, which is 10 times longer than that of normal incandescent lamps.

CFL's are highly suitable for places such as Living rooms, Hotel lounges, Bars, Restaurants, Pathways, Building entrances, Corridors, etc.

Installation of metal halide lamps in place of mercury / sodium vapor lamps

Metal halide lamps provide high color rendering index when compared with mercury & sodium vapor lamps. These lamps offer efficient white light. Hence, metal halide is the choice for color critical applications where, higher illumination levels are required. These lamps are highly suitable for applications such as assembly line, inspection areas, painting shops, etc. It is recommended to install metal halide lamps where color rendering is more critical.

Installation of High Pressure Sodium Vapor (HPSV) lamps for applications where color rendering is not critical

High pressure sodium vapor (HPSV) lamps offer more efficacies. But the color rendering property of HPSV is very low. Hence, it is recommended to install HPSV lamps for applications such street lighting, yard lighting, etc.

Installation of high frequency (HF) electronic ballasts in place of conventional ballasts

New high frequency (28-32 kHz) electronic ballasts have the following advantages over the traditional magnetic ballasts:

- 1) Energy savings up to 35%
- 2) Less heat dissipation
- 3) Lights instantly
- 4) Improved power factor
- 5) Operates in low voltage load
- 6) Less in weight
- 7) Increases the life of lamp

Light Distribution

Energy efficiency cannot be obtained by mere selection of more efficient lamps alone. Efficient luminaires along with the lamp of high efficacy achieve the optimum efficiency. High-performance materials, such as mirror-optic luminaires with a high output ratio and bat-wing light distribution, specular aluminum, improve both fixture output and control. Fixtures and the lamps in them collect dust and dirt, which significantly degrades their efficiency. Periodic cleaning is needed to maintain system performance. Air flow through an open fixture reduces dirt accumulation.

For achieving better efficiency, luminaires that are having light distribution characteristics appropriate for the task interior should be selected. The luminaires fitted with a lamp should ensure that discomfort glare and veiling reflections are minimized. Installation of suitable luminaires, depends upon the height - Low, Medium & High Bay. Luminaires for high intensity discharge lamp are classified as follows:

1. Low bay, for heights less than 15'
2. Medium bay, for heights between 15' -25'
3. High bay, for heights greater than 25'

The installation of luminary is very important.

- When mounting fixtures close to the task or target surface, use those with a wide light distribution that will cover the area
- When mounting fixtures 25' or more away, use those with a narrower light distribution to punch light downwards. These fixtures require special reflectors and are often called "high bays".

System layout and fixing of the luminaires play a major role in achieving energy efficiency. Therefore, fixing the luminaires at optimum height and usage of mirror optic luminaries leads to energy efficiency.

Two terms on luminaries are important:

The coefficient of utilization (CU) is the percentage of lamp lumens that are received on the work plane. The CU is a function of luminary efficiency, room geometry, and room surface reflectances. CU values, found in luminary manufacturer catalog data, are used to evaluate how effectively a luminary delivers light to the work plane in a given space. It is not appropriate to compare luminaires only by CU, except for use in the same space.

Spacing criteria (SC) provides information regarding how far apart luminaires may be spaced to maintain uniform lighting. To use the spacing criteria, multiply the net mounting height by the spacing criteria value. The resulting number represents the maximum (center-to-center) distance that the luminaires may be spaced.

Lighting Energy Consumption and Controls

Lighting energy consumption depends on the electrical load and the hours of use. It is therefore affected by the design of a lighting installation to meet the lighting requirements of the space, together with its associated controls, and also its management in operation. The installed load required to satisfy the lighting requirements depends on the efficiency of the equipment: lamps, ballasts, luminaries and the properties of the space: the room size and surface reflectances.

The length of time the lighting is in use is determined primarily by the occupancy pattern of the space, and the ability of the occupants to control the lighting; for example switching on lighting only in those areas where it is needed, can have a major influence on energy consumption. The availability of daylight within the space can also affect the use of the lighting. The inclusion of a suitable lighting control system is therefore a major factor in ensuring energy efficiency.

Lighting controls can be used to adjust lighting levels, providing only what is needed, when it is needed and thus save money. The logic is simple. Keep the lights off when nobody is in the room. Take for example, the typical private office is empty 53 percent of the day, storerooms 56 percent, and meeting rooms 66 percent, and restrooms are empty 70 percent of the time. Installing for instance, the occupancy sensors can reduce office lighting energy use by 25 to 50%.

Described below are the different types of lighting controls commonly applied.

Local switches: Local switches are those most common in the work place and home, typically located by the entrance of a room. A local switch can be either a simple on/off switch, dimmer or a remote control device which transmits signals to switch or dim the lights.

On-off switching can be provided by single or three- or four-way switches, multi-circuit switching. Multi-circuit switching is accomplished by subdividing the lighting circuits into small areas and providing each area with a switch. Smaller the area covered by a switch the better; one switch should not control too many lights. It is recommended to control lights in groups parallel to windows to maximize day lighting wherever possible.

Time Controls: Time control scheduling is the control strategy employed to adjust lighting according to a predetermined schedule and is best suited for facilities where certain things happen at certain times.

Time clocks are the easiest way to switch lights 'on and off' at set times. There are several types, including preset, electromechanical, electronic, and astronomical.

Outside lights could have a combination of light sensor and time switch. This would allow lights to be switched on at dusk but off at midnight. They could then come on again at 06.00 for example and switch off at dawn.

Try setting timers to switch off lights at convenient times during the day when it is expected that either there will be sufficient daylight, or when rooms will be unoccupied such as at lunchtime or set break times. When timers are used to turn off lights in occupied areas, they should have a feature that warns occupants when lights are going to be turned off so occupants can extend the on time. Time-activated sweep systems are used to sweep off building lighting sequentially and usually use the components of low-voltage relay systems.

Occupancy Sensors: Occupancy sensors detect a occupant presence in the sensor's 'line of sight', which triggers the light to switch on or off, and often has a delayed switch off timer to prevent an area plunging into darkness when an occupant stops moving. Occupancy recognition is the strategy applied to intermittently occupied areas to turn lights on when people are present and automatically turn lights off after the room is unoccupied.

Occupancy sensors: The two principal technologies used for occupancy sensors are passive infrared (PIR) and ultrasonic.

- 1) **Infrared or PIR sensors** react only to body heat and sense occupancy by detecting the difference in heat from a body and the background. A lens creates conical detection zones so PIR sensors use line-of-sight sensing to "see" an area and control it. Infra-red sensors are most sensitive to lateral motion.
- 2) **Ultrasonic sensors** use volumetric detectors and transmit waves above the range of human hearing, then measure the time for the waves to return. Ultrasonic units can detect persons

behind obstructions, but are sensitive to common air movements. Ultrasonic sensors are most sensitive to motion toward or away from the sensor.

A delay feature prevents rapid cycling due to air motions. Occupancy sensors are most effectively used in intermittently used rooms, such as warehouses, rest rooms, conference rooms, meeting rooms and corridors. Cost effectiveness of a control device is dependent upon the wattage controlled, and the hours.

Photo-Sensitive Sensors: This type of control responds to light levels at the work area and adjusts these levels accordingly to ensure optimum lighting throughout the day. Photocells are light-activated switches used to turn off lights when daylight is adequate for safety and task performance. A time clock in conjunction with a photocell prevents outdoor lighting from coming on during the day because of inclement weather.

Control lights in parallel to windows to allow as many lights as possible to be switched off when sufficient daylight is available. A delay feature prevents rapid cycling during cloudy days.

Control Strategies to Reduce Lighting Power

Dimming, daylight harvesting, and lumen depreciation compensation are the three major control strategies used to reduce lighting energy use. Dimming involves adjusting the light output of luminaires to a specific level.

Dimming: Fluorescent dimming is now accomplished with adjustable light output electronic ballasts that can dim to 5 percent light output for energy-management applications. HID dimming is accomplished by voltage reduction. Two-level control is a common type of HID control that uses relay switching of capacitors in the ballast compartment, resulting in a fixed reduction.

Daylight harvesting: is the control strategy that is applied where daylight can be used effectively for lighting interior spaces. Daylight harvesting systems change the light level gradually according to the daylight level. The strategic application of photo-sensors is the key. Unlike photocells that switch lights based on light level, these silicon sensors gradually increase or decrease the light output of a fluorescent system using dimming ballast.

Lumen depreciation compensation: is the newest lighting control strategy that employs special photosensors that detect the actual light level and track the lumen depreciation of the lamps. When the lamps are new and surfaces are clean, the output of the dimming ballasts and input power is low, saving energy. Input power and light gradually increase as lamps age and surfaces accumulate dirt to compensate for these depreciation effects.

Microprocessor based controllers: Another method is usage of microprocessor based controllers along with building management systems (BMS). The lighting control can be obtained by using logic

units located in the ceiling, which can take pre-program commands and activate specified lighting circuits. Advanced lighting control system uses movement detectors or lighting sensors, to feed signals to the controllers.

Standards and Codes

Local building and energy codes govern lighting installations in the US. They are usually based on the National Electric Code. The national Energy Policy Act of 1994 (EPACT), imposes standards on local codes, using ASHRAE-IES 90.1 as a guide. ASHRAE-IES 90.1 is a consensus standard developed by the American Society of Heating, Refrigerating, and Air Conditioning Engineers and the Illuminating Engineering Society of North America. It sets the maximum power density (watts/square foot) that can be permitted by state codes (which can be still more stringent) and also establishes minimum requirements for lighting controls.

ANSI-IES RP-1 is the recommended practice for the lighting of offices established by the IESNA and adopted as a national standard by ANSI. ANSI-IES RP-1 is not a mandated code; it recommends professional design practice (by the consensus process) and includes specific illuminance and luminance ranges.

Lighting facts

In summary note certain lighting facts:

- 1) Compact fluorescent lamps last 10 to 13 times longer than the traditional incandescent light bulb, while consuming 75 percent less energy.
- 2) Fluorescent lamps produce approximately five times the lumens per watt of standard incandescent lamps.
- 3) T10 lamps produce 24% more light than a F40-T12 while consuming 3% more energy.
- 4) T8 lamps with a CRI of 85 produce 7% more light than a conventional F40-T12 while consuming 16% less energy.
- 5) T8 lamps generally contain 25% less mercury than conventional T12 lamps.
- 6) The high frequency operation of electronic ballasts increases the efficacy of the lamps by 10 to 12 percent, compared with conventional magnetic ballasts.
- 7) High pressure sodium lamps produce more than twice the light of similar wattage mercury vapor lamps. High Pressure Sodium systems produce up to 130 lumens per watt.
- 8) Low pressure sodium lamps are the most energy-efficient of all lamps, producing approximately three times the lumens per watt of mercury vapor lamps. Low Pressure Sodium lighting systems produce up to 183 lumens per watt.
- 9) At average national electric rates, replacing a 150-watt incandescent lamp with a 35-watt metal halide lamp (drawing a total of 45 watts) would save about \$30 a year.

- 10) Halogen lamps can save 60 watts per lamp in retail situations, while providing better lighting quality than incandescent lamps.
- 11) Low Pressure Sodium lamps emit a monochromatic light which can be effective as security lighting, roadway lighting and to supplement white light.
- 12) Increasing light levels can be achieved by utilizing a higher output lamp, upgrading the lens or louver, cleaning the luminaries, or adding reflectors.
- 13) A facility lit with parabolic luminaires, T8 lamps, and electronic ballasts can be lit at half the watts per square foot normally used in conventional lighting designs.
- 14) Fixture efficiency can be significantly improved by replacing translucent diffusers or small-cell louvers with clear acrylic lenses or large-cell parabolic louvers.
- 15) Smooth surfaced, highly reflectant (89%) acoustical ceiling panels can increase the effectiveness of indirect lighting systems and provide lighting energy savings up to 20% compared to conventional ceiling panels.
- 16) Decreasing light levels can be achieved by delamping, using lower wattage lamps, power reducers, partial output electronic ballasts, and dimming systems.
- 17) When designing a new installation the lamp type selected should have as high an efficacy as possible and with characteristics that suit the requirements of the installation – color properties, appearance and rendering, life or service period, etc.
- 18) For an existing installation a change to a more efficient lamp type will reduce energy consumption and therefore cost. Some such changes involve little or no capital expenditure – others may require the addition of or change of control gear or a change of luminary type and/or position.
- 19) Lighting quality includes a number of lighting parameters that are highly subjective and not easily quantified, including veiling reflections, glare, color, and flicker. Controlling these parameters effectively is essential to creating lighting that meets the needs and expectations of people working in a space, making them comfortable and more productive.
- 20) In general, the light should be brightest on your immediate work area, but should not over-illuminate or you will create too much contrast. Lighting levels should decrease as you move into the general environment of the room.
- 21) *Each kilowatt hour of lighting requires 3,412 BTUs of air cooling. One ton of air conditioning requires 12,000 BTUs. Every 100 kilowatts removed during a lighting retrofit cuts cooling load by about 28 tons - enough capacity to cool an 8,000 square foot commercial space.*
- 22) High-efficiency lighting reduces peak wattage demand and usually raises power factor, both of which yield spare capacity on transformers and other parts of a building's electric service.
- 23) High efficiency lighting contributes to reductions in emissions of pollutants associated with global warming, acid rain and smog.

In summary a reference lamp characteristic table is shown below:

Type of Lamp	Lumens / Watt		Color Rendering Index	Typical Applications	Typical Life (hours)
	Range	Avg.			
Incandescent	8 - 18	14	Excellent	Homes, restaurants, general lighting, emergency lighting	1000
Fluorescent Lamps	45 - 60	50	Good w.r.t coating	Offices, shops, hospitals, homes	5000
Compact fluorescent Lamps (CFL)	40 - 70	60	Very good	Hotels, shops, homes, offices	8000 -10000
High pressure mercury (HPMV)	45 - 57	50	Fair	General lighting, industries, garages, parking areas, flood lighting	5000
Halogen lamps	18 - 24	20	Excellent	Display, flood lighting, stadium exhibition grounds, construction areas	2000-4000
High pressure sodium (HPSV) SON	67 -121	90	Fair	General lighting in factories, warehouses, street lighting	6000-12000
Low pressure sodium (LPSV) SOX	101 - 175	150	Poor	Roadways, tunnels, canals, street lighting	6000 -12000